



S15 ENGINE BAY FUSE BOX DIAGRAM

						20A	SPARE FUSE	15A	SPARE FUSE	10A	SPARE FUSE
IGN 15A	FUEL PUMP	IGN 20A	WIPER	IGN 10A	METER	IGN 10A	RR WIPER	BAT 15A	RR DEFOG	BAT 15A	RR DEFOG
IGN 10A	TURN LAMP	ST 10A	STARTER SIGNAL	IGN 10A	A/T CONTROL	BAT 15A	HAZARD LAMP	BAT 15A	STOP LAMP	BAT 15A	ROOM LAMP
IGN 10A	FUEL INJECTOR	IGN 10A	HICAS	IGN 10A	MOTOR FAN	ACC 10A	MIRROR	ACC 15A	CIG LIGHTER		
ACC 10A	AUDIO	IGN 10A	AIR BAG	IGN 10A	ENGINE CONTROL	ACC 15A	BLOWER MOTOR	ACC 15A	BLOWER MOTOR		
IGN 10A	ELECTRONIC PARTS	IGN 10A	ABS	IGN 10A	AIR COND -TIONER					BAT 10A	ELECTRONIC PARTS



1. USE SPECIFIC FUSES ONLY.
2. CONTACT A NISSAN DEALER FOR SYSTEMS NOT LISTED.

NISSAN
93F00

S15 FOOTWELL FUSEBOX DIAGRAM